

DVR Reader 100-499 Instructions1 for DVR 0001-204

08 October 2009

Gyross P/L

Software Installation Notes-

- 1) Right click and copy 'PC Viewer V3.8EN.exe' from CD to desktop.

To view DVR draw-

- 1) Connect USB cable to black DVR reader.
- 2) Connect supplied 12 volt 500mA Plug Pack and turn on mains power and DVR Reader switch off.
- 3) Plug draw into black draw reader hardware and turn on DVR Reader rocker switch on.
- 4) Double click on PC screen short cut PC Viewer V3.8EN.exe. Viewer screen will now open up.