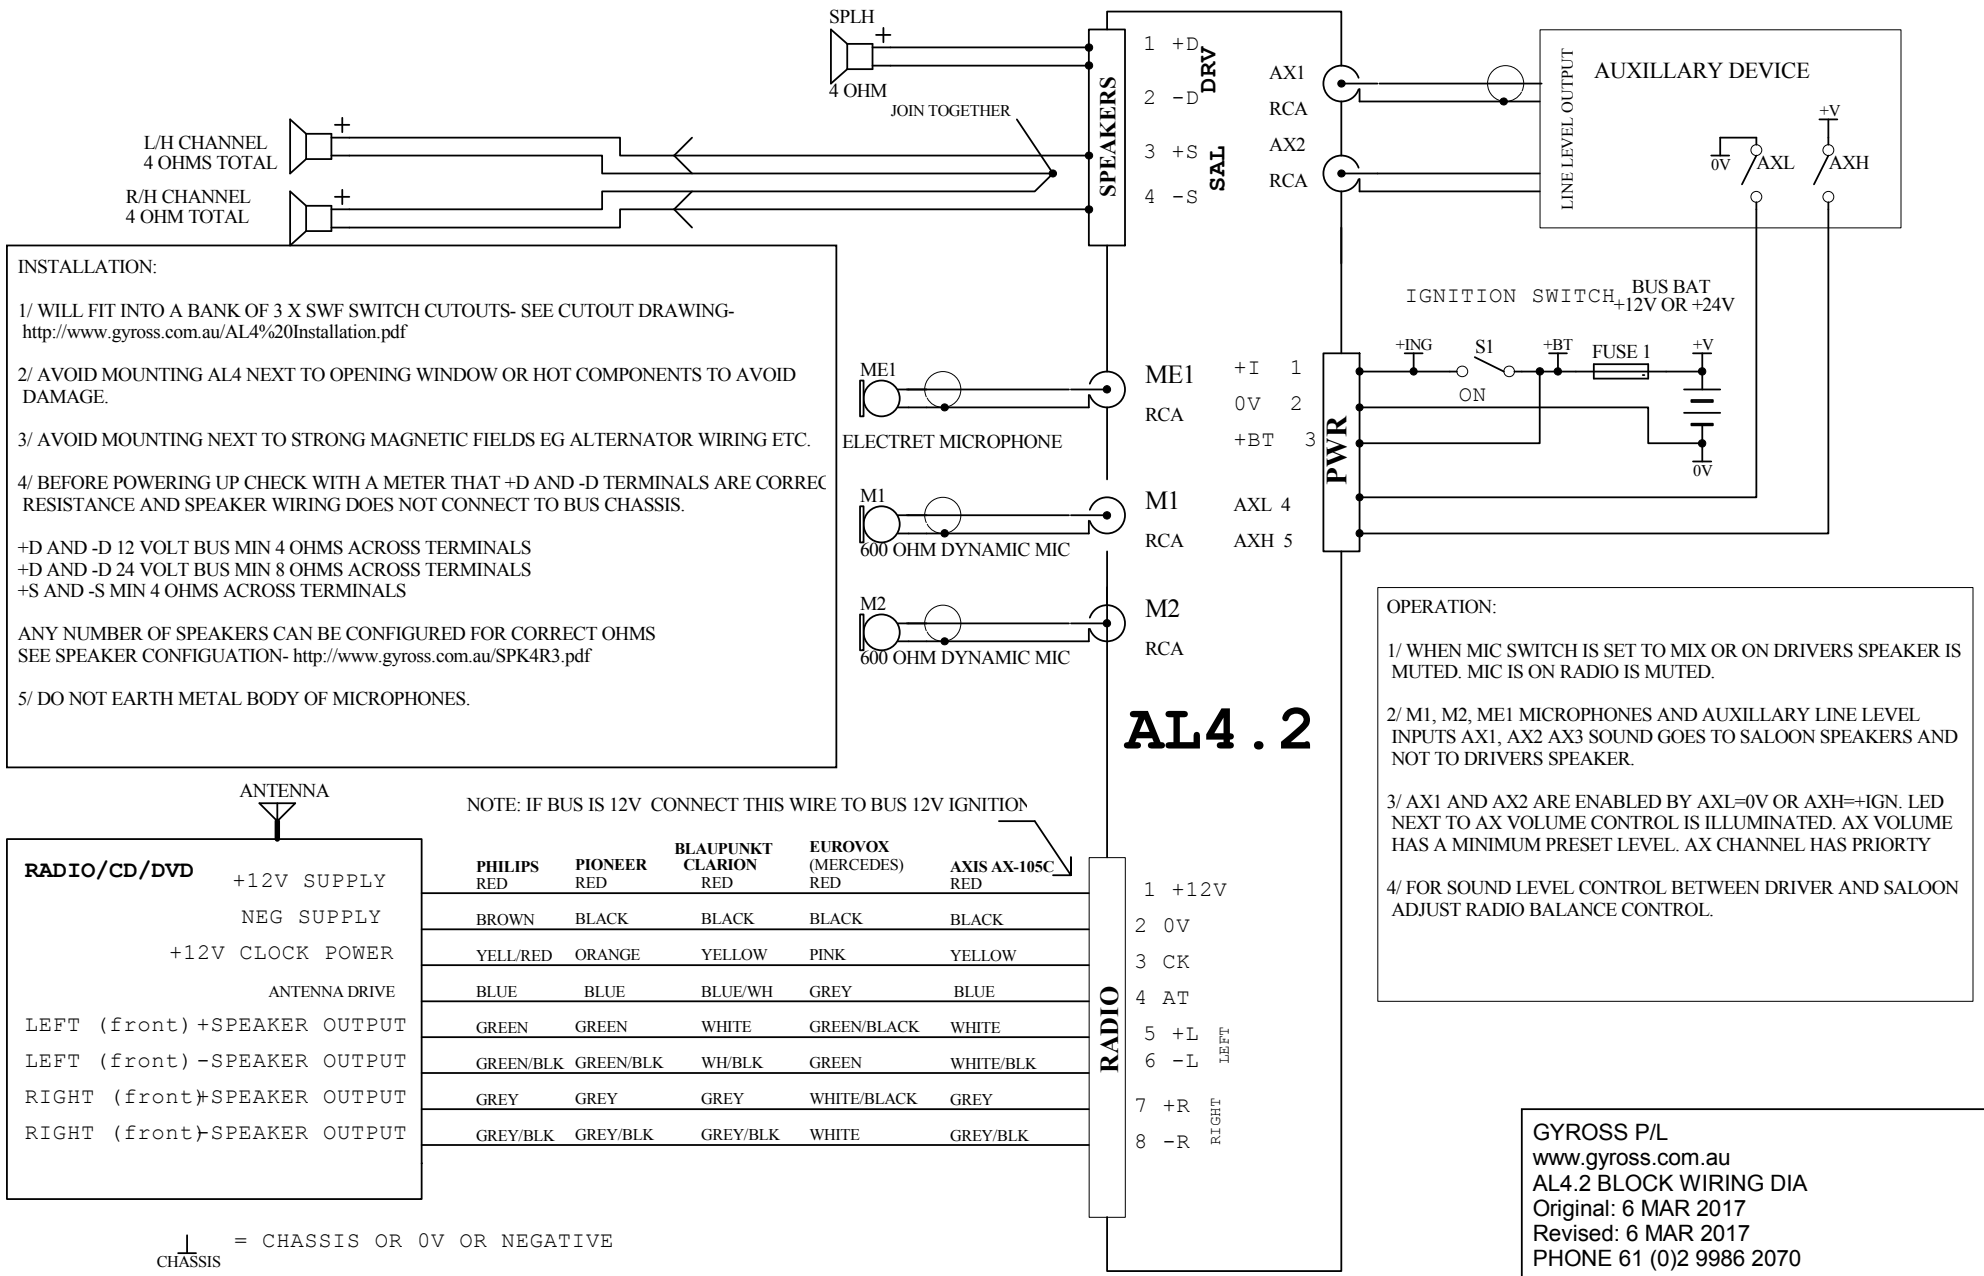

	PHILIPS RED	PIONEER RED	BLAUPUNKT CLARION RED	EUROVOX (MERCEDES) RED	AXIS AX-105C RED
	BROWN	BLACK	BLACK	BLACK	BLACK
	YELL/RED	ORANGE	YELLOW	PINK	YELLOW
	BLUE	BLUE	BLUE/WH	GREY	BLUE
	GREEN	GREEN	WHITE	GREEN/BLACK	WHITE
	GREEN/BLK	GREEN/BLK	WH/BLK	GREEN	WHITE/BLK
	GREY	GREY	GREY	WHITE/BLACK	GREY
	GREY/BLK	GREY/BLK	GREY/BLK	WHITE	GREY/BLK

INSTALLATION:

1/ WILL FIT INTO A BANK OF 3 X SWF SWITCH CUTOUTS- SEE CUTOUT DRAWING- http://www.gyross.com.au/AL4%20Installation.pdf

2/ AVOID MOUNTING AL4 NEXT TO OPENING WINDOW OR HOT COMPONENTS TO AVOID DAMAGE.

3/ AVOID MOUNTING NEXT TO STRONG MAGNETIC FIELDS EG ALTERNATOR WIRING ETC.

4/ BEFORE POWERING UP CHECK WITH A METER THAT +D AND -D TERMINALS ARE CORREC RESISTANCE AND SPEAKER WIRING DOES NOT CONNECT TO BUS CHASSIS.

+D AND -D 12 VOLT BUS MIN 4 OHMS ACROSS TERMINALS
+D AND -D 24 VOLT BUS MIN 8 OHMS ACROSS TERMINALS
+S AND -S MIN 4 OHMS ACROSS TERMINALS

ANY NUMBER OF SPEAKERS CAN BE CONFIGURED FOR CORRECT OHMS
SEE SPEAKER CONFIGUATION- http://www.gyross.com.au/SPK4R3.pdf

5/ DO NOT EARTH METAL BODY OF MICROPHONES.

OPERATION:

1/ WHEN MIC SWITCH IS SET TO MIX OR ON DRIVERS SPEAKER IS MUTED. MIC IS ON RADIO IS MUTED.

2/ M1, M2, ME1 MICROPHONES AND AUXILLARY LINE LEVEL INPUTS AX1, AX2 AX3 SOUND GOES TO SALOON SPEAKERS AND NOT TO DRIVERS SPEAKER.

3/ AX1 AND AX2 ARE ENABLED BY AXL=0V OR AXH=+IGN. LED NEXT TO AX VOLUME CONTROL IS ILLUMINATED. AX VOLUME HAS A MINIMUM PRESET LEVEL. AX CHANNEL HAS PRIORTY

4/ FOR SOUND LEVEL CONTROL BETWEEN DRIVER AND SALOON ADJUST RADIO BALANCE CONTROL.

GYROSS P/L
www.gyross.com.au
AL4.2 BLOCK WIRING DIA
Original: 6 MAR 2017
Revised: 6 MAR 2017
PHONE 61 (0)2 9986 2070